


## BONANZA INSTALLATION INSTRUCTIONS


**Please read all instructions completely before beginning installation!**

Note: Install wing tips in accordance with the accepted methods and procedures as outlined in FAA Regulations Part 43.13

1. Cut 1 1/4" off trailing end of navigation light and cover.
2. Install lights on tips using original hardware and Tinnerman speed nuts. Use light bracket as a template to drill two mounting holes. Secure a ground wire to wing tip light bracket.
3. Connect light and secure ground wire to closing rib with a P.K. screw.
4. Attach tip to wing as per Beech original installation:
  - a. Align bottom edge of new tip to correct position.
  - b. Before drilling holes, be sure tip is fitted tight against wing leading edge.
  - c. Minimum edge distance 5/16".

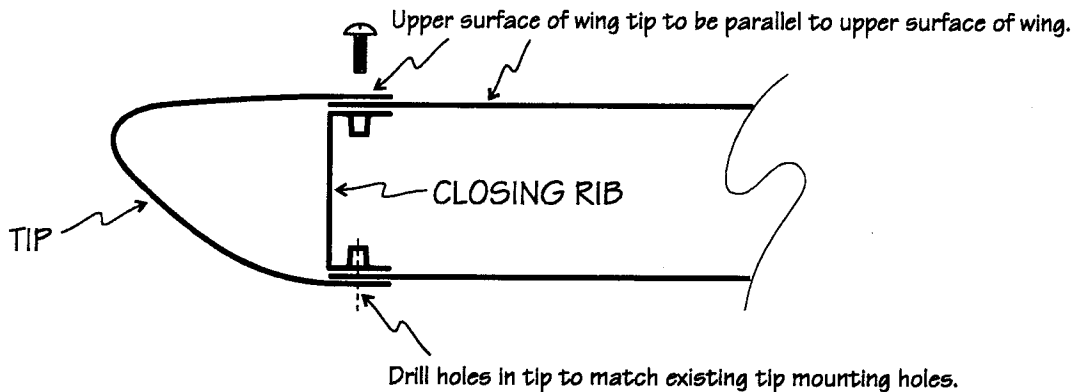

5. Complete FAA Form 337. No weight change:  
"Installed Met-Co-Aire tips per S.D. 1024, FAA Approval STC SA998WE."

<b>Installation of Reinforced Fiberglass Wing Tips for Beech Models:</b>		
B50, C50, D50, D50A, D50B, E50, F50, G50, 35, A35, B35, C35, D35, E35, F35, G35, H35, J35, K35, M35, N35, P35, S35, 35R (S/N D25R1 only) 35-33 AND 35-A33		
<b>Scale:</b> None	<b>Approved by:</b> <i>R. Hebert</i>	<b>Drawn by:</b> LRW
<b>Date:</b> 6/9/65		<b>Revised:</b> 5/27/93
 <span style="float: right; font-size: small;">AIRCRAFT MODIFICATIONS</span>		
P.O. Box 2216	(714)870-4610	Fullerton, California 92633
<b>FAA Approval: STC SA998WE 7/13/65</b>		<b>S.D. 1024</b>